

## 54–545 Removal and installation of switch

---

### A. Models 107, 123

#### Removal


---

- 1 Remove combination switch.
- 2 Remove switch (1) from combination switch (2).

#### Installation

---

- 3 For installation proceed vice versa.
- 4 Operational checkup on road.

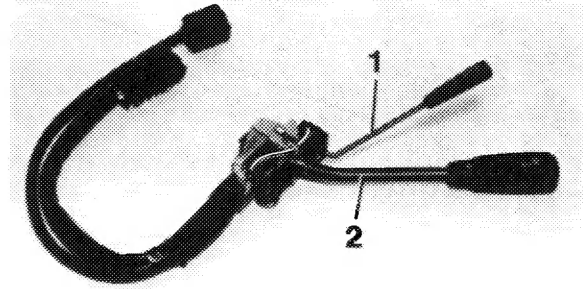

154 - 11976/1